

Please read carefully before commencing installation

Oil Filter Installation:-

- 1) The oil filter must be fitted onto the fuel line so that the direction of the fuel flow passes through the filter as shown below
- 2) Check the bowl screw is 100% tight before any fuel is passed through the filter.
- 3) The filter must be bled of air by first loosening the inlet bleed screw and then the outlet bleed screw
- 4) Check, once the filter has been 'bled' that the bleed screws have been securely tightened and/or have not been cross threaded.



Oil Filter Element Replacement

When replacing the filter element the new "o" rings supplied must be used as failure to do so could cause oil leaks or allow air into the oil line.

Specifications:

Filtration: 10 Micron
Flow Rate: 20 L/hr
Max Pressure: 3.5 bar

Please read carefully before commencing installation