



Spare Parts List cod. F00342000 BP3000 12V

Pos.	Material Code	Description	QT	UM	
0001	R1608500A	CHAMBER COVER KIT BP 3000	1	PC	
0002	R14347000	KIT ROTOR wVANES w/KEY BP3000	1	PC	
0003	R16090000	KIT BY-PASS	1	PC	
0004	R11287000	KIT n.10 Blades 13.72x5.8x25	1	PC	
0005	R16075000	SHAFT SEAL BP3000	1	PC	
0006	R16716000	KIT OR BP3000	1	PC	
0007	F1601100A	ELECTRICAL BOX WITH SWITCH	1	PC	
0008	R13143000	SINGLE POLE SWITCH	1	PC	
0009	R09218000	12V FUSE ONLY 25 AMP (CLEAR FUSE)	1	PC	
0010	R16053000	KIT MOTOR BP3000 12V with SUPPORTS	1	PC	
0011	R1608400A	KIT PUMP SUPPORT BP3000	1	PC	

Spare Parts List cod. F00347000 BP3000 24V

Pos.	Material Code	Description	QT	UM	
0001	R1608500A	CHAMBER COVER KIT BP 3000	1	PC	
0002	R14347000	KIT ROTOR wVANES w/KEY BP3000	1	PC	
0003	R16090000	KIT BY-PASS	1	PC	
0004	R11287000	KIT n.10 Blades 13.72x5.8x25	1	PC	
0005	R16075000	SHAFT SEAL BP3000	1	PC	
0006	R16716000	KIT OR BP3000	1	PC	
0007	F1601100A	ELECTRICAL BOX WITH SWITCH	1	PC	
0008	R13143000	SINGLE POLE SWITCH	1	PC	
0009	R09219000	24V FUSE ONLY 15 AMP (BLUE FUSE)	1	PC	
0010	R16054000	KIT MOTOR BP3000 24V with SUPPORTS	1	PC	
0011	R1608400A	KIT PUMP SUPPORT BP3000	1	PC	