


Calibration Procedure

Before you Proceed, make sure you have downloaded the Piusi B.SMART App.

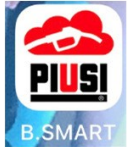


NB:-


Before you start the calibration procedure, please make sure there is enough fuel in the tank to complete the process, the power to the B.SMART is stable, and you have a calibration container of a known quantity.




Open the Piusi B.SMART app on your phone.

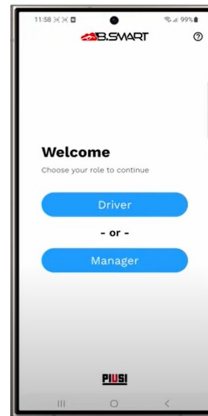


Select Manager on the screen.

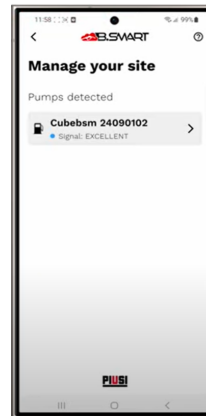


The phone will connect to the B.SMART panel by Bluetooth.

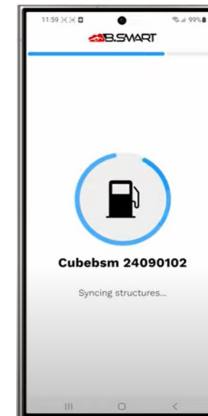

Please make sure the App has Bluetooth switched on.

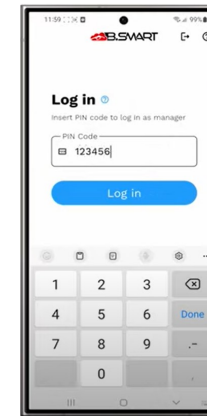


When asked to Log In, as standard the Managers pin is 123456., this may have been changed.

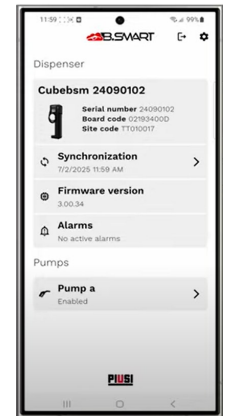


From this screen select Pump A.




Then select By Dispensing.

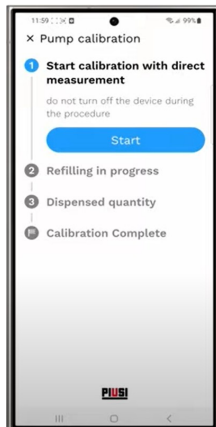


Click Start, and dispense into the calibration container.

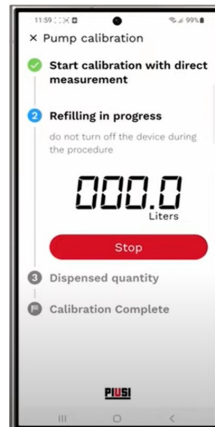


The screen will change to this.

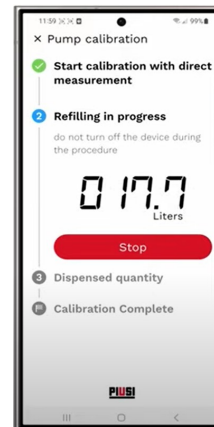


Once complete click STOP.

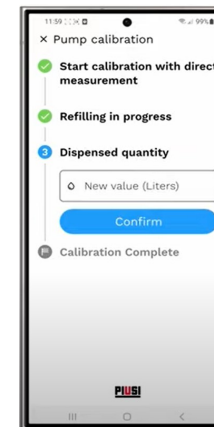

You can now add the new Litres dispensed.

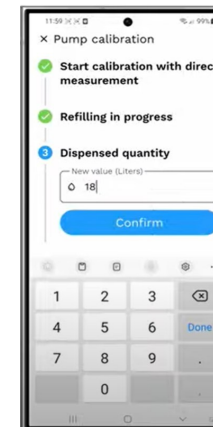

Once changed press confirm.

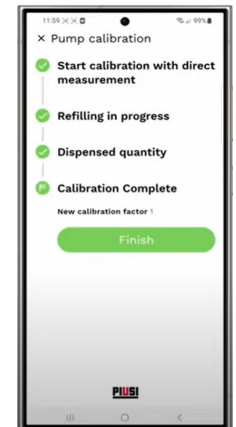

Click Finish for the new value to be added.